

## Harley Sandlow

## **Back Bar Assembly Instructions**

Congratulations on your purchase of a  $\text{H-D}^{\circ}$  Back Bar. The utmost care has gone into the design and manufacturing of this product. Please read these instructions carefully.



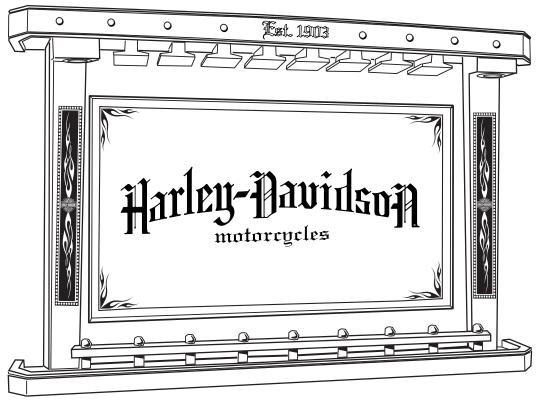

PART DESCRIPTION	QTY
Back Bar	1
Mounting Bracket (2 pieces)	1
Plastic Anchors	5
Screws #6 x 1"	5

- **STEP 1:** Remove mounting bracket from back of back bar by sliding bottom mounting bracket away from top mounting bracket. **Note: Top mounting bracket is attached to back bar.**(See Diagram 1)
- **STEP 2:** Place mounting bracket onto wall at desired height. Make sure it's level and mark your holes. Remove mounting bracket from wall.
- **STEP 3:** Drill holes and carefully tap plastic anchors into place with a hammer.
- **STEP 4:** Once again place mounting bracket against wall. Insert wood screws through holes and into plastic anchors. Secure mounting bracket to wall with wood screws.
- **STEP 5:** Carefully align Back Bar to mounting bracket on wall. Slide down to secure in place. (See Diagram 2)

## **WARRANTY:**

Free replacement of any part that fails within 90 days from date of purchase, excluding shipping costs. Void if damaged by misuse, accidents, alterations, failure to follow instructions, fire, flood, and acts of God. If you have any questions or comments, please contact us at: **BrandedProducts.com** 



Ace Product Management Group, Inc. Milwaukee, WI U.S.A. Manufactured under license from Harley-Davidson Motor Co. © 2010 All Rights Reserved.

For a dealer near you call toll free 1-800-588-2743 in the USA and Canada or use our dealer locator at www.harley-davidson.com

